



Item # _____

Job _____

SUPER ERECTA SHELF™ SOLID SHELVING (18-Gauge)

- **Strength:** Two-fold thickness of 18-gauge steel forms $\frac{1}{8}$ " raised edges on all four sides of the shelving. This ship's edge gives all-around rigidity and high-strength. Sturdy aluminum castings firmly lock the corners to the posts.
- **Fast, Secure Assembly:** Post has rolled, circular grooves along its entire length at 1" (25mm) intervals. A patented, tapered split sleeve (plastic or aluminum) snaps together around each post. Tapered openings in the shelf corners slide over the tapered split sleeves providing a positive lock. Shelf is assembled in minutes without the use of nuts or bolts, without the use of any special tools.
- **Sanitary:** The raised ship's edge on all four sides and at the corners contains spillage, minimizes contamination and permits easier clean-up. Embossed or louvered/embossed shelf designs allow air circulation under packages and containers.
- **Versatile Construction:** Super Erecta Shelf® solid shelving can change as quickly as your needs change. By using various accessories hundreds of shelving configurations become possible.
- **Shelf Accessibility:** Shelves can be loaded/unloaded from all sides. This open construction allows use of the maximum storage space of the cube.
- **Adjustability:** Shelves can be adjusted in 1" (25mm) intervals along the entire length of the post.
- **Finishes:** Available in two options: stainless steel and galvanized.
- **Adjustable Feet:** Bolt levelers compensate for surface irregularities.



Ship's Edge



InterMetro Industries Corporation
North Washington Street
Wilkes-Barre, PA 18705
www.metro.com

Copyright © 2000 InterMetro Industries Corp.



SUPER ERECTA SHELF®
Solid Shelving
(18-Gauge)

10-20



**SUPER ERECTA SHELF™
SOLID SHELVING (18-Gauge)**

Solid Shelves

Solid shelving in four widths and six lengths is available in galvanized steel with clear, baked-on acrylic coating or in stainless steel. The surfaces are flat, embossed, or louvered/embossed.

Width (in.)	Width (mm)	Length (in.)	Length (mm)	Approx. Pkd. Wt.		Flat		Embossed		Louvered/Embossed	
				(lbs.)	(kg)	Cat. No. Galvanized	Cat. No. Stainless	Cat. No. Galvanized	Cat. No. Stainless	Cat. No. Galvanized	Cat. No. Stainless
14	355	24	610	10	4.5	1424FG	1424FS	1424EG	1424ES	1424LG	1424LS
14	355	30	760	12	5.4	1430FG	1430FS	1430EG	1430ES	1430LG	1430LS
14	355	36	910	14	6.4	1436FG	1436FS	1436EG	1436ES	1436LG	1436LS
14	355	42	1060	15	6.8	1442FG	1442FS	1442EG	1442ES	1442LG	1442LS
14	355	48	1220	17	7.7	1448FG	1448FS	1448EG	1448ES	1448LG	1448LS
14	355	60	1525	22	9.9	1460FG	1460FS	1460EG	1460ES	1460LG	1460LS
18	455	24	610	11	5.0	1824FG	1824FS	1824EG	1824ES	1824LG	1824LS
18	455	30	760	14	6.4	1830FG	1830FS	1830EG	1830ES	1830LG	1830LS
18	455	36	910	16	7.3	1836FG	1836FS	1836EG	1836ES	1836LG	1836LS
18	455	42	1060	18	8.2	1842FG	1842FS	1842EG	1842ES	1842LG	1842LS
18	455	48	1220	20	9.1	1848FG	1848FS	1848EG	1848ES	1848LG	1848LS
18	455	60	1525	24	10.9	1860FG	1860FS	1860EG	1860ES	1860LG	1860LS
21	530	24	610	13	5.9	2124FG	2124FS	2124EG	2124ES	2124LG	2124LS
21	530	30	760	15	6.8	2130FG	2130FS	2130EG	2130ES	2130LG	2130LS
21	530	36	910	18	8.2	2136FG	2136FS	2136EG	2136ES	2136LG	2136LS
21	530	42	1060	21	9.5	2142FG	2142FS	2142EG	2142ES	2142LG	2142LS
21	530	48	1220	23	10.4	2148FG	2148FS	2148EG	2148ES	2148LG	2148LS
21	530	60	1525	26	11.8	2160FG	2160FS	2160EG	2160ES	2160LG	2160LS
24	610	24	610	15	6.8	2424FG	2424FS	2424EG	2424ES	2424LG	2424LS
24	610	30	760	17	7.7	2430FG	2430FS	2430EG	2430ES	2430LG	2430LS
24	610	36	910	19	8.6	2436FG	2436FS	2436EG	2436ES	2436LG	2436LS
24	610	42	1060	21	9.5	2442FG	2442FS	2442EG	2442ES	2442LG	2442LS
24	610	48	1220	24	10.9	2448FG	2448FS	2448EG	2448ES	2448LG	2448LS
24	610	60	1525	31	14.0	2460FG	2460FS	2460EG	2460ES	2460LG	2460LS

Important: When ordering by components remember that stability decreases as the ratio of height to width increases. Units should be kept as wide and low as possible.


**SiteSelect™ Posts for
Super Erecta® Shelving**

Posts are fitted with adjustable leveling bolts to compensate for uneven surfaces.


Height* (in.)	Height* (mm)	Approx. Pkd. Wt.		Cat. No. Chrome	Cat. No. Stainless
		(lbs.)	(kg)		
7 1/2	195	1/2	0.3	7P	—
14 1/2	370	1	0.5	13P	13PS
27 1/2	700	1 3/4	0.75	27P	27PS
34 1/2	875	2	0.9	33P	33PS
54 9/16	1385	3	1.4	54P	54PS
62 9/16	1590	3 1/2	1.6	63P	63PS
74 5/8	1895	4	1.8	74P	74PS
86 5/8	2200	5	2.3	86P	86PS
96 5/8	2454	5 1/2	2.5	96P	—

*Height includes leveling bolt and cap.

NOTE: For mobile units order "UP" posts and casters on Catalog Sheet #11.20.

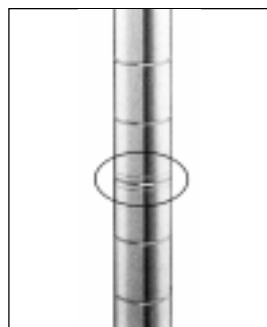

SiteSelect™ Posts are grooved at 1" (25mm) increments and numbered at 2" (50mm) increments. Posts are double-grooved every 8" (203mm) for easy identification.

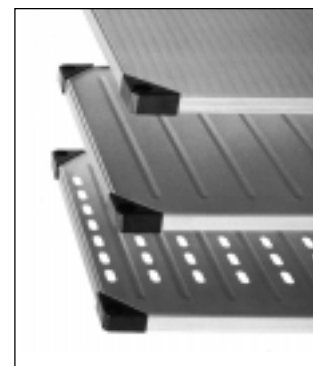

Flat, Embossed, Louvered/Embossed

Manufactured by:



InterMetro Industries Corporation

North Washington Street, Wilkes-Barre, PA 18705

Phone: 570-825-2741 • Fax: 570-825-2852

For Product Information Call: 1-800-433-2232

Visit Our Web Site: www.metro.com

L02-014

5/00

Printed in U.S.A.

Information and specifications are subject to change without notice. Please confirm at time of order.

