Job _____



MetroMax Q® STORAGE SYSTEM with *Microban® Antimicrobial Product Protection

The MetroMax Q storage system provides the most cleanable and adjustable shelving for all your storage and transport needs. Store safe and store more. MetroMax Q shelf mats have built-in *Microban® antimicrobial product protection. Microban® protects the shelf mats from bacteria, mold, mildew and fungi that cause odors, stains and product degradation.

- Quick to assemble: MetroMax Q assembles in minutes, without tools. Posts have numbered grooves at 1" (25mm) increments. Simply attach the shelf wedge connectors to the posts at the desired shelf locations, insert the posts into a stack of shelves and raise the shelves into position. MetroMax Q's packaging design minimizes the amount of cardboard, making installation, cleanup and disposal easy.
- Quick to adjust, Maximizing storage capacity: MetroMax Q's unique corner design allows you to unlock shelves without the need for tools. Simply pull each Corner Lock Release™ to unlock the shelf, relocate the wedge connectors to the new height on the posts, and reposition the shelf.
- Quick to clean: Polymer shelf mats lift off the shelf frame for easy cleaning. Shelf mats are divided into 12" (305mm) and 18" (457mm) modules that fit easily into a dishwasher for cleaning. MetroMax Q shelf mats have built-in Microban® antimicrobial product protection. They remain cleaner between cleanings.
- Quick to adapt: A wide range of accessories such as dividers, ledges, tote and tray slides and many more allow you to customize MetroMax Q to your exact needs.
- Quick to move: MetroMax Q can quickly become mobile by removing the threaded leveling foot and adding any standard MetroMax stem caster.
- Corrosion resistant, durable: MetroMax Q polymer shelf mats have a lifetime warranty against rust and corrosion. Posts and shelf frames have a 15 year warranty against rust. Each shelf level can hold 800 lbs. (375kg) per shelf up to 48" (1219mm), 600 lbs. (275kg) per shelf up to 72" (1829mm).

*MICROBAN® and the MICROBAN® symbol are registered trademarks of the Microban Products Company, Huntersville, NC







MetroMaxQ Corner Lock Release



www.metro.com



MetroMax Q® STORAGE SYSTEM

Specifications

- **Shelf frames and posts:** Steel with electroplated substrate and highly durable, abrasion-resistant epoxy finish. The adjustable foot is reinforced nylon.
- Shelf mats: Injection molded polypropylene with exclusive built-in Microban® antimicrobial product protection.
- Shelf wedge connector: Reinforced nylon.
- **Temperature range:** -20°F (-29°C) to 125°F (52°C) continuous use, with intermittent exposure to 200°F (93°C) for cleaning.
- MetroMax Q Shelves (complete with frame, mat, and wedge connectors)

	Width/Length		Approx. Pkd. Wt.	
Cat. No.	(in.)	(mm)	(lbs.)	(kg)
Q1824G2	18x24	457x610	10	4.5
Q1830G2	18x30	457x760	11	5.0
Q1836G2	18x36	457x914	12	5.4
Q1842G2	18x42	457x1066	14	6.2
Q1848G2	18x48	457x1219	16	7.3
Q1854G2	18x54	457x1370	18	8.2
Q1860G2	18x60	457x1524	20	9.1
Q1872G2	18x72	457x1829	23	10.4

	Width/Length		Pkd. Wt.	
Cat. No.	(in.)	(mm)	(lbs.) (kg)	
Q2424G2	24x24	610x610	11 5.0	
Q2430G2	24x30	610x760	14 6.2	
Q2436G2	24x36	610x914	15 6.8	
Q2442G2	24x42	610x1066	17 7.6	
Q2448G2	24x48	610x1219	19 8.6	
Q2454G2	24x54	610x1370	21 9.5	
Q2460G2	24x60	610x1524	23 10.4	
Q2472G2	24x72	610x1829	29 13.2	

Approx.

	Width/Length		Approx. Pkd. Wt.
Cat. No.	(in.)	(mm)	(lbs.) (kg)
Q2124G2	21x24	530x610	10.5 4.8
Q2130G2	21x30	530x760	12.5 5.7
Q2136G2	21x36	530x914	13.5 6.1
Q2142G2	21x42	530x1066	15.5 7.0
Q2148G2	21x48	530x1219	17.5 7.9
Q2154G2	21x54	530x1370	19.5 8.8
Q2160G2	21x60	530x1524	21.5 9.8
Q2172G2	21x72	530x1829	26.0 11.8

• MetroMax Q Grid Mat Kits for upgrade or replacement of existing mats

(with built-in Microban antimicrobial product protection)

	Wic	lth/Length		Wid	lth/Length		Widt	h/Length
Cat. No.	(in.)	(mm)	Cat. No.	(in.)	(mm)	Cat. No.	(in.)	(mm)
QM1824G2	18x24	457x610	QM2124G2	21x24	530x610	QM2424G2	24x24	610x610
QM1830G2	18x30	457x760	QM2130G2	21x30	530x760	QM2430G2	24x30	610x760
QM1836G2	18x36	457x914	QM2136G2	21x36	530x914	QM2436G2	24x36	610x914
QM1842G2	18x42	457x1066	QM2142G2	21x42	530x1066	QM2442G2	24x42	610x1066
QM1848G2	18x48	457x1219	QM2148G2	21x48	530x1219	QM2448G2	24x48	610x1219
QM1854G2	18x54	457x1370	QM2154G2	21x54	530x1370	QM2454G2	24x54	610x1370
QM1860G2	18x60	457x1524	QM2160G2	21x60	530x1524	QM2460G2	24x60	610x1524
QM1872G2	18x72	457x1829	QM2172G2	21x72	530x1829	QM2472G2	24x72	610x1825

MetroMax Q Posts Stationary

				JIUX.
	Width	Width/Length		l. Wt.
Cat. No.	(in.)	(mm)	(lbs.)	(kg)
Q13PE	13	370	.5	.2
Q27PE	27	686	.8	.36
Q33PE	33	875	1.0	.45
Q54PE	54	1370	1.5	.7
Q63PE	63	1585	2.0	.9
Q74PE	74	1880	2.25	1.0
Q86PE	86	2195	2.5	1.2

Mobile

	Width/Length			orox. I. Wt.
Cat. No.	(in.)	(mm)	(lbs.)	(kg)
Q13UPE	13	370	.5	.2
Q27UPE	27	686	.8	.36
Q33UPE	33	875	1.0	.45
Q54UPE	54	1370	1.5	.7
Q63UPE	63	1585	2.0	.9
Q74UPE	74	1880	2.25	1.0
Q86UPE	86	2195	3	1.2



MetroMax Q Wedge Connector Included with each shelf or shelf frame. Bag of 4. Cat. No. Q9985

MetroMax Q® STORAGE SYSTEM





Posts are numbered at 1" (25mm) intervals.



Wedge connector attaches easily to post.



Shelf fits tightly over wedge connector.



Corner Lock Release™ pulls out easily to unlock shelf for repositioning.




Open-grid shelf mats remove quickly for cleaning.



Shelf mat sections fit in the dishwasher for easy, thorough cleaning.

MetroMax Q® Accessories

See Catalog Sheet 9.35 for more information.

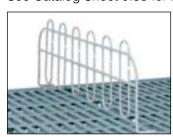

Shelf Divider



Shelf Ledges




Label Holder



Tray Drying Rack

MetroMax Q® STORAGE SYSTEM



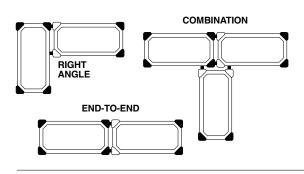



"S" Hook: Used to "add on" one or multiple MetroMax Q storage systems while eliminating the cost of two posts per unit. Can be used to join units end-to-end, back-toback, at right angles, etc. Two "S" hooks are required for each shelf.

Cat. No. Q9995Z





 Post Clamp: Adds stability by joining posts of two separate units together. With it, each unit is supported by four posts and buttressed by the adjacent unit.
 Cat. No. 9994X



• Stem Casters:

A variety of stem casters are offered for MetroMax Q mobile applications.

See Catalog Sheet 11.20 for stem casters.





• Foot Plate: Used when units are to be bolted to the floor or, without bolts, when a broader foot is desired.

Cat. No. 9993Z

See Catalog Sheet 9.35 for MetroMax Q Accessories.

All Metro Catalog Sheets are available on our Web Site: www.metro.com



InterMetro Industries Corporation

North Washington Street, Wilkes-Barre, PA 18705 Phone: 570-825-2741 ● Fax: 570-825-2852 For Product Information Call: 1-800-433-2232

Copyright © 2006 InterMetro Industries Corp.