



Item # _____

Job _____



MetroMax® Storage System

MetroMax® STORAGE SYSTEM with *Microban® Antimicrobial Product Protection

The MetroMax® Storage System is by far the most revolutionary and advanced system of its kind in the marketplace today. Incredibly strong, with materials that are backed by a lifetime warranty against corrosion, MetroMax has interchangeable solid and open-grid mats, which give it unequalled versatility. MetroMax shelf mats have built-in Microban® antimicrobial product protection. Microban® protects the shelf mats from bacteria, mold, mildew and fungi that cause odors, stains and product degradation.

- **Strong and Durable:** Reinforced polymers give MetroMax incredible strength — 800 lbs. (375kg) per shelf up to 48" (1220mm) length and 600 lbs. (275kg) per shelf up to 72" (1825mm) long. And shelves won't mark or crease.
- **Corrosion and Rust Proof:** MetroMax has a lifetime warranty against corrosion and rust, so it is perfect for damp, humid conditions as well as dry storage.
- **Fast, Easy Assembly:** MetroMax assembles easily in minutes, without tools. Posts have numbered grooves at 1" (25mm) increments, with ½" (13mm) increment adjustment. Shelf wedge lock connectors, with window and pointer to locate desired post groove, snap onto posts.
- **Removable Mats:** Solid and open-grid mats remove and interchange in seconds. The mats have built-in Microban® antimicrobial product protection. They remain cleaner between cleanings.
- **Smooth, Flat Surfaces:** MetroMax's smooth polymer surfaces protect shelf contents from unwanted damage and are easy to clean and maintain.
- **Completely Mobile:** MetroMax systems can quickly become mobile by simply removing the leveling foot and adding any standard Metro stem caster (see catalog sheet 11.20). For applications where thresholds are crossed on a regular basis, aluminum or stainless steel dollies can be used with standard stationary MetroMax posts. MetroMax's polymer construction is noise-resistant in mobile applications.
- **Easy to Clean and Maintain:** Shelf mats lift off the shelf frame for cleaning away from the site, so there is far less risk of contaminating stored products with cleaning chemicals. Open grid shelf mats, in 12" (305mm) and 18" (457mm) lengths, can be removed individually and fit easily into the dishwasher. Solid one-piece shelf mats contain spills and have surface ribs to prevent products from sticking to the shelf. Shelf frame and posts have smooth, rounded surfaces and wipe down easily and quickly.
- **Adaptable:** A wide range of accessories such as shelf dividers, stackable ledges, drawers and slides, rods and tabs, bin markers, and more, let you customize MetroMax to your exact needs. By using "S" hooks, a multitude of problem solving configurations are possible, while eliminating the cost of two posts. See Catalog Sheet 9.05 for more information.
- **Adjustable:** Shelves are adjustable at ½" (13mm) increments along the height of the numbered posts. A leveling foot at the bottom of each post compensates for irregular floor surfaces.

ADVANCED POLYMER DESIGN



NOTE: MetroMax® is not recommended for use in temperatures below -20°F. (-29°C)

*MICROBAN and the MICROBAN symbol are registered trademarks of the Microban Products Company, Huntersville, NC.



InterMetro Industries Corporation
North Washington Street
Wilkes-Barre, PA 18705
www.metro.com



9.01



Specifications

Longitudinal Beams and Posts: Pultrusions — continuous glass fibers and thermoset resin composite.

End Beams, Adjustable Foot and Socket: Injection molded polyester thermoplastic resin with glass reinforcement.

Mats, Open and Solid: Mineral reinforced polypropylene. Mats contain Microban® antimicrobial product protection.

Ledges, Dividers, and Wedge: Glass reinforced polypropylene.

Post Cap and Center Beam Cap: High-density polyethylene.

“S” Hook Tab Hole Plug: Vinyl.

Collar and “S” Hook: Type 304 Stainless Steel.

Bonding of Longitudinal Beams to End Beams: High temperature polyamide adhesive and stainless steel screws.

MetroMax is applicable in cooler conditions down to -20°F (-29°C).

MetroMax® Shelves

(Complete with frame, mat and wedge lock connectors)

OPEN GRID MAT

Cat. No.	Width		Length		Approx. Pkd. Wt.	
	(in.)	(mm)	(in.)	(mm)	(lbs.)	(kg)
1824GX2	18	457	24	610	9	4.2
1830GX2	18	457	30	760	11	4.8
1836GX2	18	457	36	914	12	5.4
1842GX2	18	457	42	1060	14	6.2
1848GX2	18	457	48	1220	15	6.8
1854GX2	18	457	54	1372	17	7.6
1860GX2	18	457	60	1524	18	8.2
1872GX2	18	457	72	1829	21	9.6
2424GX2	24	610	24	610	11	5.0
2430GX2	24	610	30	760	13	5.7
2436GX2	24	610	36	914	14	6.5
2442GX2	24	610	42	1060	16	7.4
2448GX2	24	610	48	1220	18	8.1
2454GX2	24	610	54	1372	20	9.1
2460GX2	24	610	60	1524	22	9.8
2472GX2	24	610	72	1829	28	11.5

SOLID SHELF MAT

Cat. No.	Width		Length		Approx. Pkd. Wt.	
	(in.)	(mm)	(in.)	(mm)	(lbs.)	(kg)
1824FX2	18	457	24	610	11	4.8
1830FX2	18	457	30	760	12	5.6
1836FX2	18	457	36	910	14	6.4
1842FX2	18	457	42	1060	16	7.3
1848FX2	18	457	48	1220	18	8.2
1854FX2	18	457	54	1372	20	8.9
1860FX2	18	457	60	1524	22	9.8
2424FX2	24	610	24	610	13	5.7
2430FX2	24	610	30	760	15	6.7
2436FX2	24	610	36	914	17	7.7
2442FX2	24	610	42	1060	19	8.8
2448FX2	24	610	48	1220	22	9.8
2454FX2	24	610	54	1372	24	10.8
2460FX2	24	610	60	1524	26	11.8

MetroMax® Posts

Cat. No. Stationary	Cat. No. Mobile	Height		Approx. Pkd. Wt.	
		(in.)	(mm)	(lbs.)	(kg)
13PX	13UPX	15½	368	0.5	0.2
33PX	33UPX	35½	876	1.0	0.5
54PX	54UPX	55½	1384	1.5	0.7
63PX	63UPX	63½	1587	2.0	0.9
74PX	74UPX	75½	1892	2.3	1.0
86PX	86UPX	87½	2197	2.5	1.2




Shown with Optional Dolly Base.
See Spec Sheet 9.05 for MetroMax Accessories.



Wedge Connector
Included with each shelf or shelf frame. Bag of 4.
Cat. No. 9985X



Solid Shelf Mat with Microban[®] Product Protection

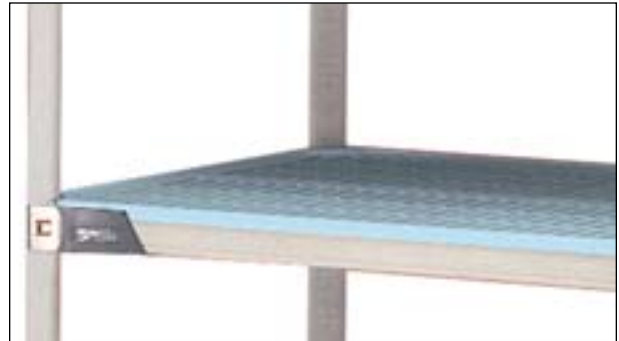

Open-Grid Shelf Mat with Microban[®] Product Protection



Solid and open-grid shelf mats remove and interchange quickly.



Open-grid shelf mat sections fit into the dishwasher for easy, thorough cleaning.



MetroMax shelves can be used as part of the SmartWall Plus[™] System (Spec Sheet #10.41)

MetroMax Corner Adapter Kit

To use MetroMax shelves with Super Erecta shelf supports.
Bag of 4
Cat. No. 9997X-4



Job _____

MetroMax® STORAGE SYSTEM



- **“S” Hook:** Used to “add on” one or multiple MetroMax storage systems while eliminating the cost of two posts per unit. Can be used to join units end-to-end, back-to-back, at right angles, etc. Two “S” hooks are required for each shelf.

Cat. No. 9995X



- **Intermediate “S” Hook:** Snaps onto front or back of shelf when joining units at right angles.

Cat No. 9996X

- **Post Clamp:** Adds stability by joining posts of two separate units together. With it, each unit is supported by four posts and buttressed by the adjacent unit.

Cat. No. 9994X



- **Stem Casters:** A variety of stem casters are offered for MetroMax mobile applications. See Catalog Sheet 11.20 for stem casters.

LOAD RATING: 3 x Stem Caster Load Rating, maximum — 900 lbs. (363kg) per stem caster cart.



- **Foot Plate:** Used when units are to be bolted to the floor or when a broader foot is desired without bolts.

Cat. No. Zinc 9993Z

Cat. No. Stainless Steel 9993S



See Catalog Sheet 9.05 for MetroMax Accessories.

All Metro Catalog Sheets are available on our Web Site: www.metro.com



InterMetro Industries Corporation

North Washington Street, Wilkes-Barre, PA 18705
Phone: 570-825-2741 • Fax: 570-825-2852

For Product Information Call: 1-800-433-2232

L02-004A
Printed in U.S.A. Rev. 3/06

Information and specifications are subject to change without notice. Please confirm at time of order.

Copyright © 2006 InterMetro Industries Corp.